



**Quick-Garden**

# **HYMER**




## **Assembly instructions**



<u>PRODUCT NAME</u>	<u>HYMER</u>
<u>REFERENCE NUMBER</u>	

<b>No.</b>	<b>Measurement</b>	<b>q</b>	<b>View</b>	<b>Profile</b>	<b>Part name/ Use for:</b>
2	42x50x5000	26			Bearers
3	66x65x5160	1			Wall A
4	66x65x5160	1			Wall B
5	66x65x5160	2			Wall C, I
6	66x65x5160	1			Wall E
7	66x130x5160	17			Wall A
8	66x130x1757	32			Wall B, E
9	66x130x1749	15			Wall B
10	66x130x226	15			Wall B
11	66x130x5160	2			Wall B
11a	66x130x2508	8			Wall G, H
12	66x130x260	29			Wall E, I, G, H
13	66x130x1765	36			Wall C, I
14	66x130x5160	2			Wall C
15	66x130x100	12			Wall I
16	66x65x1765	2			Wall I
17	66x130x3702	20			Wall D
18	66x130x2312	1			Wall F
19	66x130x801	28			Wall F
20	66x130x2312	1			Wall F
21	66x130x2312	3			Wall F
22	66x130x2312	1			Wall F
23	66x130x1920	8			Wall G, H
24	66x130x4594	8			Wall G, H
25	66x130x3588	8			Wall G, H
26	66x130x851	8			Wall H
27	66x130x1391	8			Wall H
28	66x130x1156	16			Wall G, H
29	66x130x5674	10			Wall G, H
30	66x130x2016	5			Wall G
31	66x130x3632	3			Wall G
32	66x130x1006	5			Wall G
33	66x130x616	10			Wall G, H
34	66x130x5774	3			Wall G, H, D
35	66x130x5774	1			Wall D
36	66x130x4428	3			Wall G, H, D
37	66x130x4428	1			Wall D

	Measurement	Q	View	Profile	Part name/ Use for:
38	66x130x996	2			Wall G, H
39	66x130x1376	2			Wall G, H
40	66x130x1756	2			Wall G, H
41	66x130x4028	2			Wall G, H
42	66x520x5160	4			Roof frame
43	60x130x5988	4			Rafter
44	60x130x4642	4			Rafter
45		59,74 m <sup>2</sup>			Roof boards
46	20x105x2950	4			Wind board
47	20x105x2975	4			Wind board
48	16x80x2975	4			Wind board
49	22x105x5102	4			Roof plank
50	25x35x5102	4			Roof plank
51	18x65x5102	6			Ceiling borders
52		15,86 m <sup>2</sup>			Floor boards
53		3,7 m <sup>2</sup>			Floor boards
54		3,23 m <sup>2</sup>			Floor boards
55		17,34 m <sup>2</sup>			Floor boards
56	22x105x1850 22x105x1926	33 16			Floor boards terrace
57	20x35x4868	4			Floor trim
58	20x35x2330	2			Floor trim
59	20x35x2020	4			Floor trim
60	20x35x1465	3			Floor trim
61	20x35x1860	2			Floor trim
62	20x35x2401	4			Floor trim
63	20x35x3410	4			Floor trim
64	20x35x3337	1			Floor trim
65	60x100x1400	2			Support board
66	22x105x2006	2			Terrace boarding
67	22x105x1850	2			Terrace boarding
68	900	4			Terrace boarding
69	950	2			Terrace boarding
70	300x140	2			Decorative diamond
71	66x1920x1615	1			Double door
72	66x1920x700	3			Door
73	66x1010x1380	5			Window
74	66x630x600	1			Mini window

Screws			Nails		
	3.5x5	For windows and doors		2.5x6	For boards
	3.5x3	For roof decorative parts			

**IMPORTANT (Read carefully before starting)!**

- The following instructions include both pictures (indicating every part by the digits – see part list above) and illustrations. Please keep in mind that the illustrations are just a general guide to assembling all our products (For example: The illustration on how to assemble a roof applies to all our roofs). However specific models will vary in the quantity of materials needed. By closely consulting the part-list, you will know how many parts you need for each stage of the assembly, while the illustrations will show you how put them together.

- If some extra boards are left over after assembling your product, do not worry. We sometimes include extra boards to ensure that the delivery package is perfectly compact and solid.

**1. General instructions**

**Read carefully before starting.** First of all, we want to thank you for buying one of our products. Please read these instructions carefully before unpacking the parts.

**2. Storing your product prior to assembly.**

Your unpacked product must be stored in a dry, ventilated place, where it is protected from the weather (the package is not waterproof) and direct sunlight. The package and parts should be laid flat on the ground in order to avoid any damage to them. We strongly recommend assembling the product as soon as possible after it is delivered, because any complaints regarding missing or damaged parts can only be made up to 10 days after the date of delivery.

**3. Safety.**

The wooden parts may cause splinters, so please handle them carefully and wear protective gloves. Make sure there are no protruding nails, screws or staples in the assembled pieces. Always follow the instructions carefully and keep to the order of steps.



#### **4.Assembly.**


Before starting to assemble your structure, we strongly recommend that you watch our video guide on our website [www.quick-garden.co.uk](http://www.quick-garden.co.uk) (under the category "Assembly"). During the installation process constantly check that everything is level and parallel. For all parts that need to be assembled using screws, it is advisable to pre-drill holes to avoid the risk of splitting the wood during screwing.

**4.1. Familiarize yourself with the parts.** All parts are numbered, so start by checking that all parts are present by matching them off against your instruction manual. We recommend you sort the parts into separate piles. You will need a rubber hammer, electric screw-driver and anchor screws.


**4.2. Foundation.** Before starting the installation, make sure that the building surface is perfectly flat and level. Lay the foundation elements (PVC blocks, concrete slabs, etc.) For floorless models, the foundation should be at least the same size or larger (recommended) than the external dimension of the structure.




**4.3. Bearers.** The bearers must be placed according to the picture (general sample) below with gaps of around 50 cm between each other. Screw the bearers into the foundation with anchor screws.


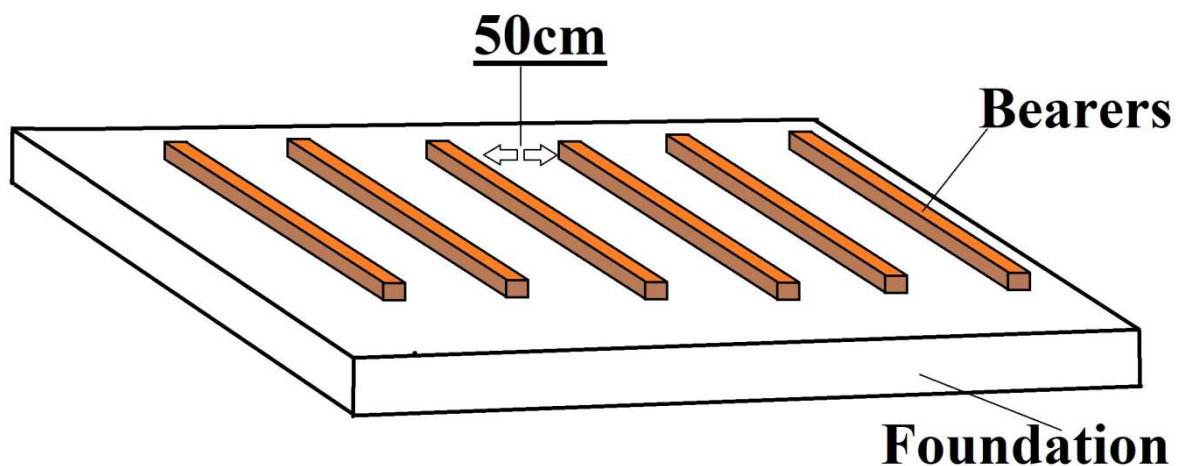


**4.4. Assembling the walls:** place the wall-boards on the bearers as shown in a general sample below (it is not the actual structure plan):


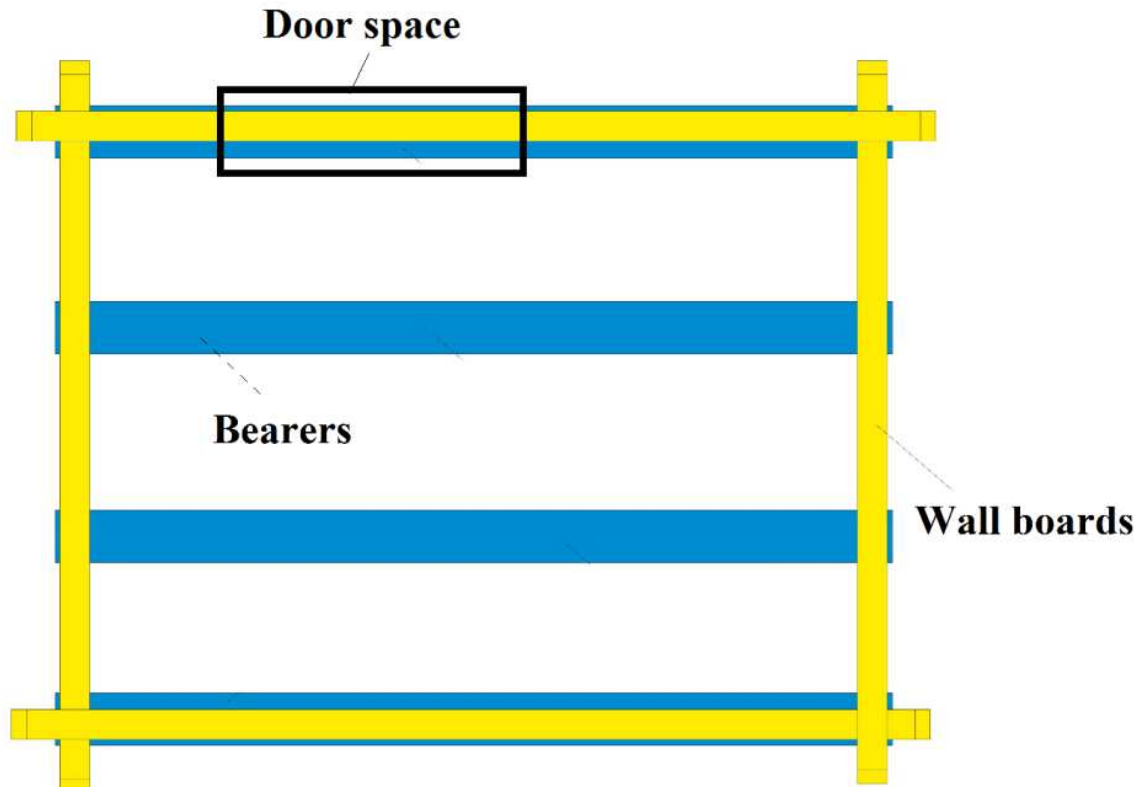


The wall-boards must be placed so that the ends interlock. Now screw the first row of wall-boards into the bearers. All the following rows of placed wall-boards should interlock not only at the ends, but along their length as well. Please screw each new row of wall-boards into the former row to ensure a solid structure. Here is an actual plan of this summerhouse:

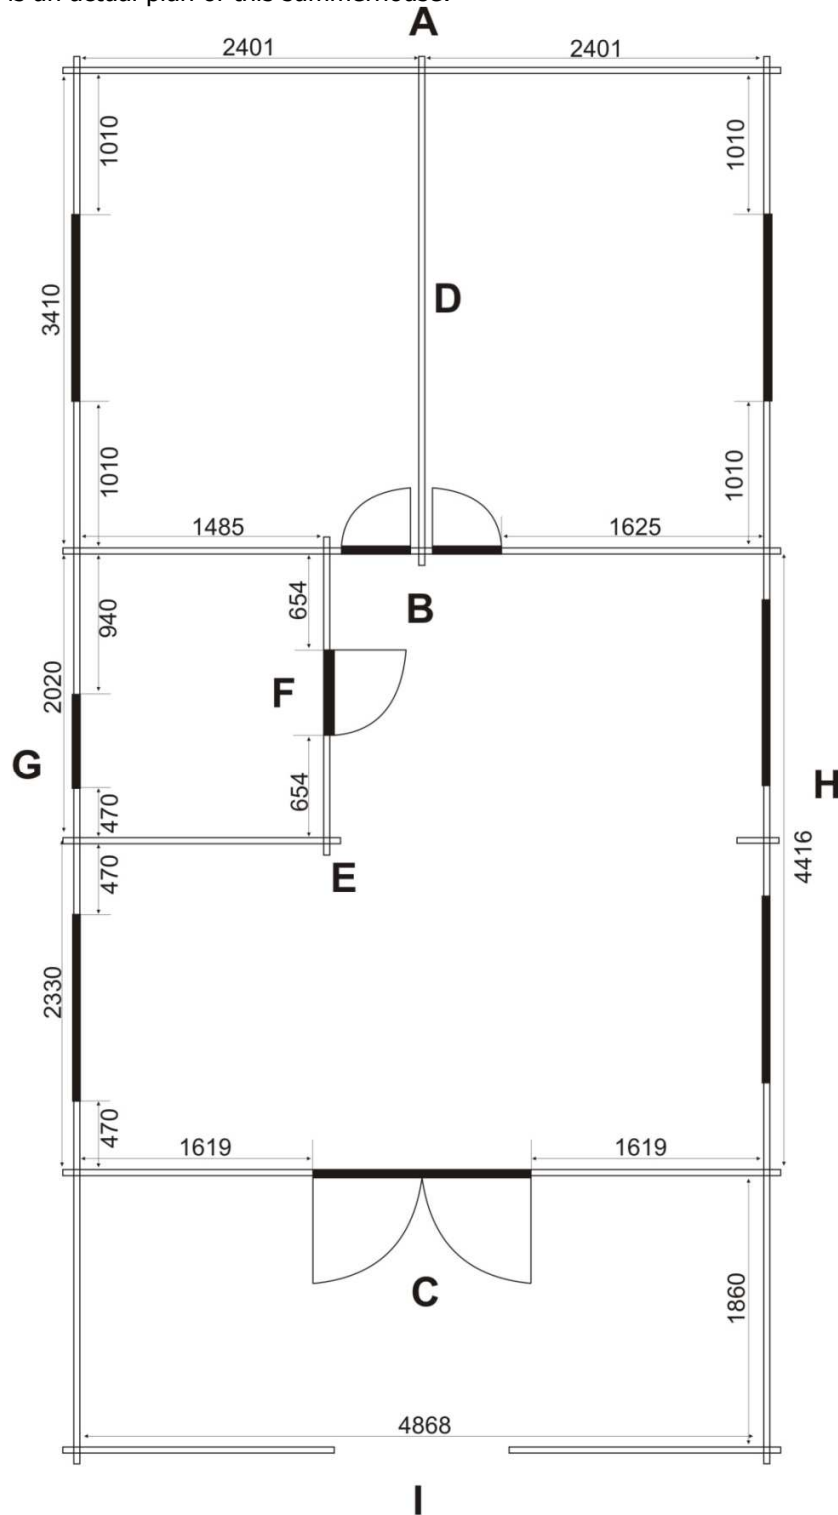


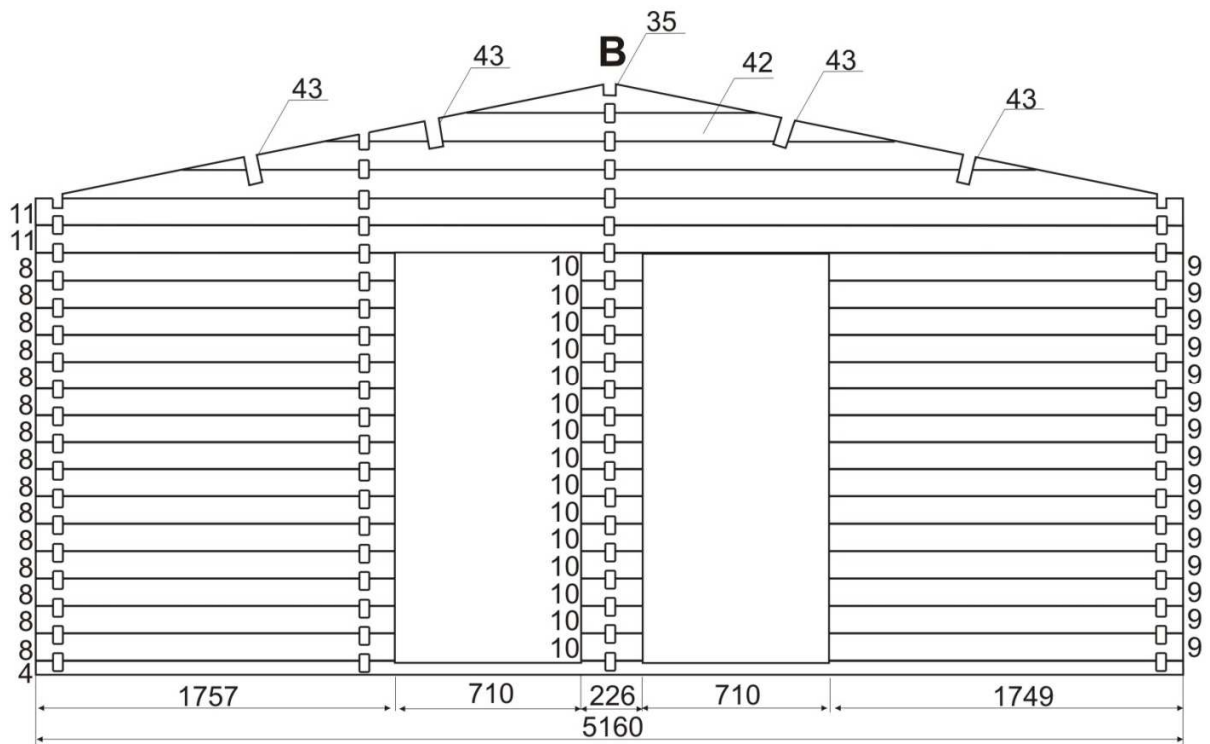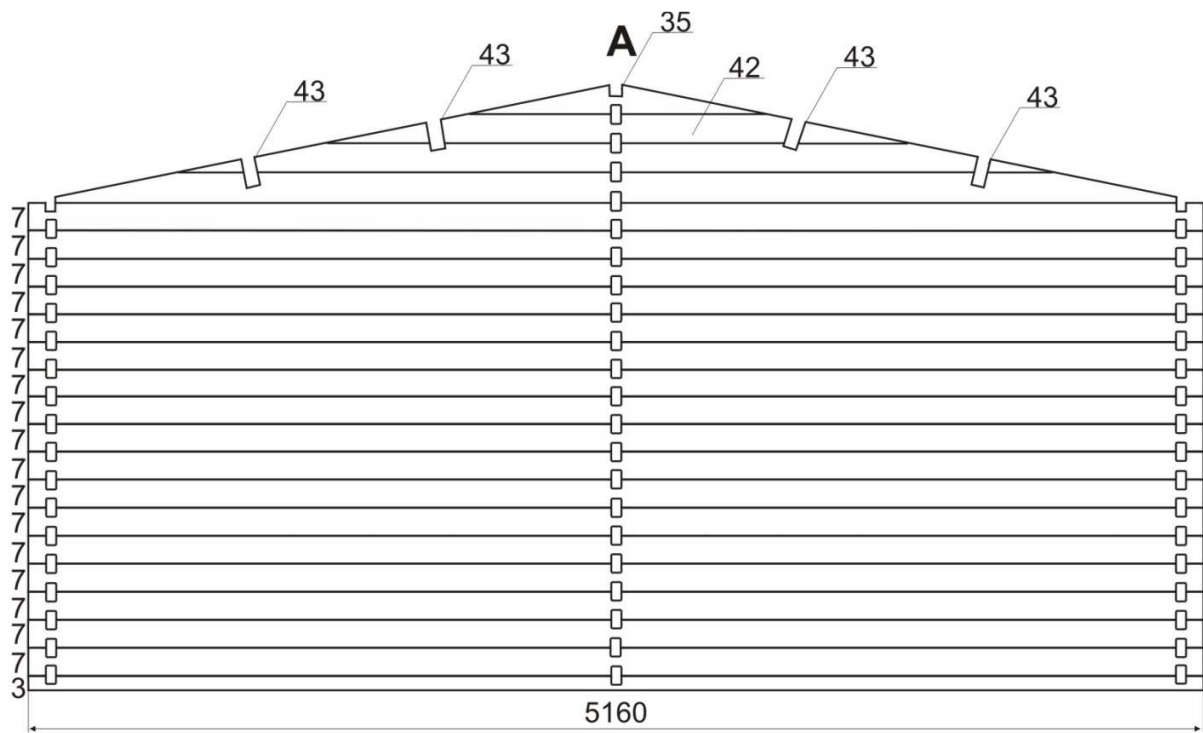




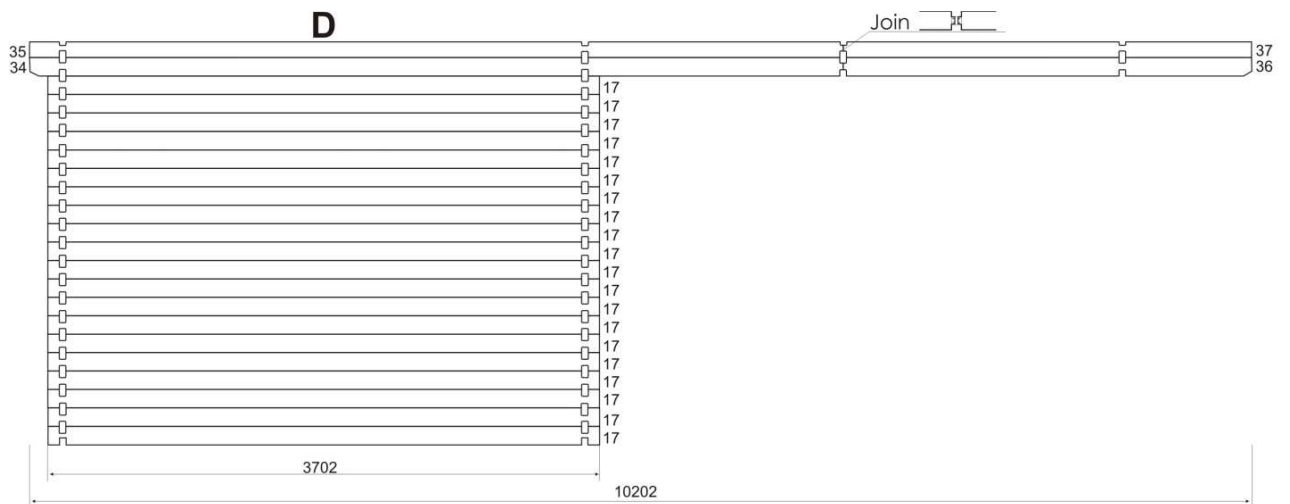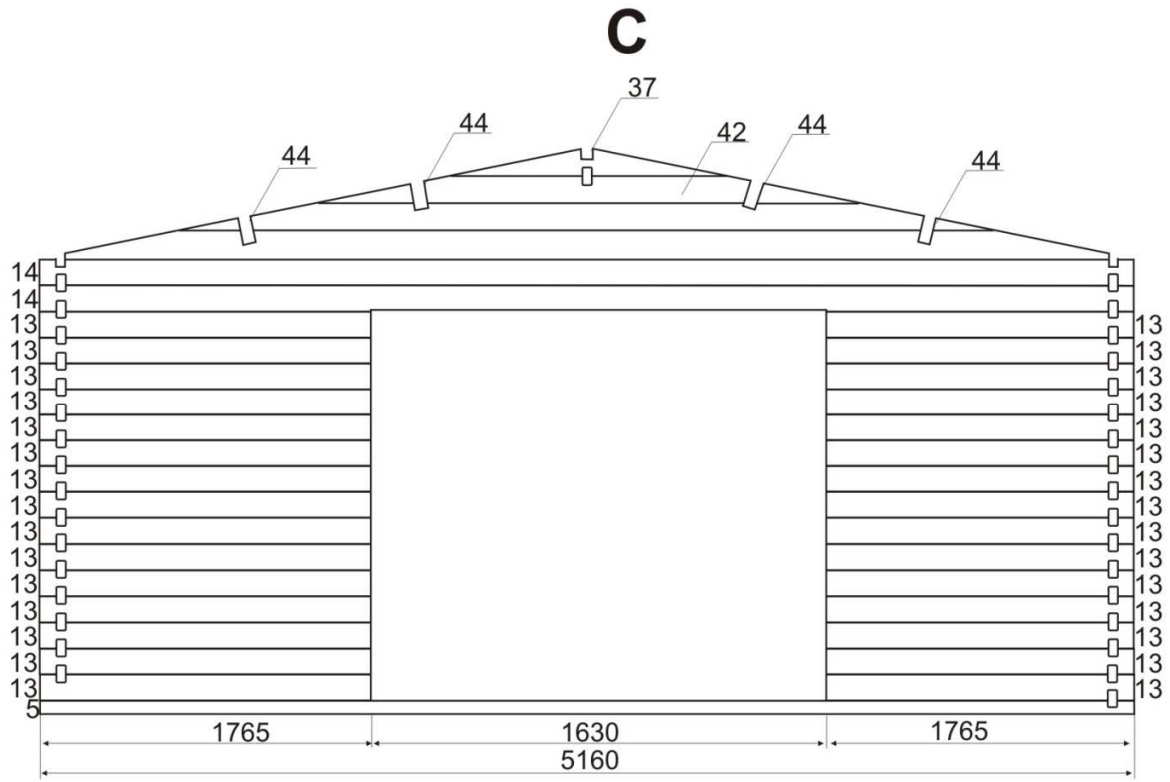


# E

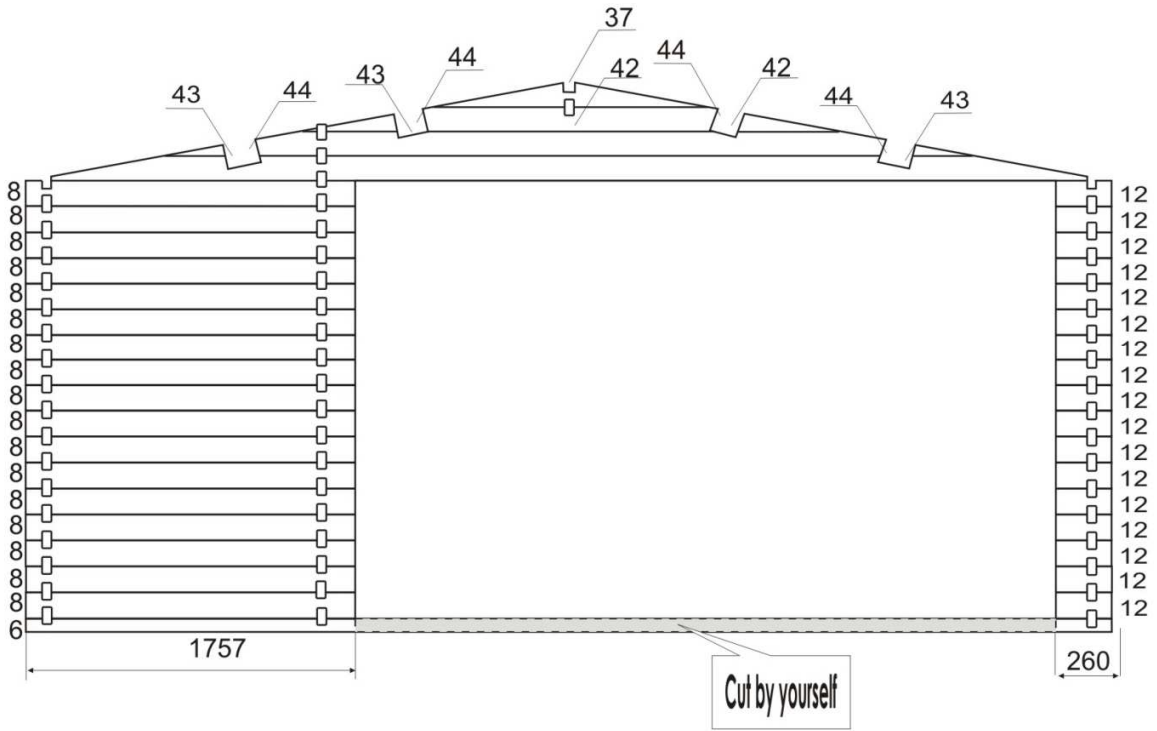


# F

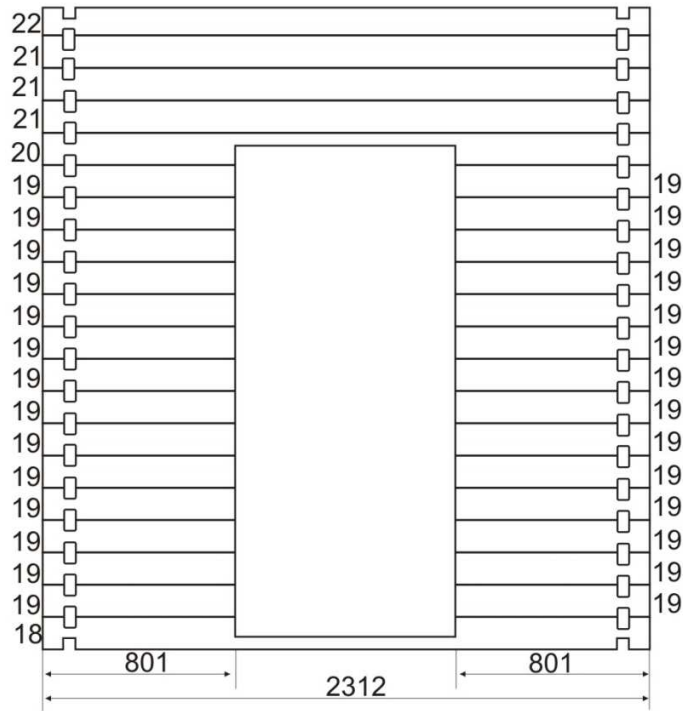


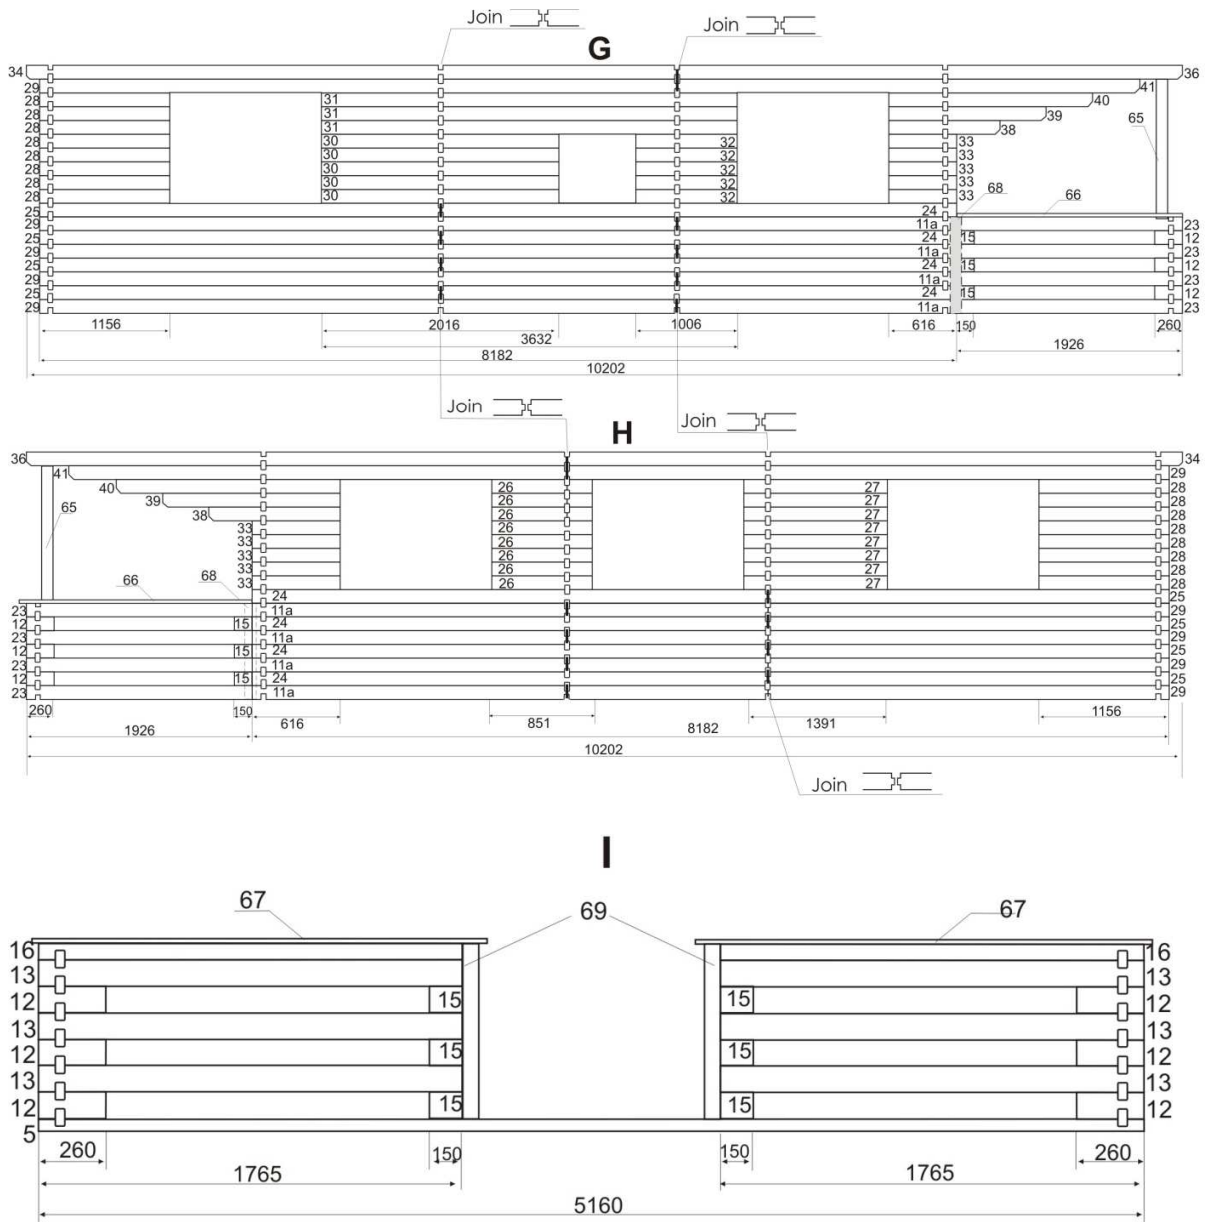


**4.5. Roof frame triangles:** After the walls are assembled, mount the roof frame triangles. These should be mounted as whole structures.

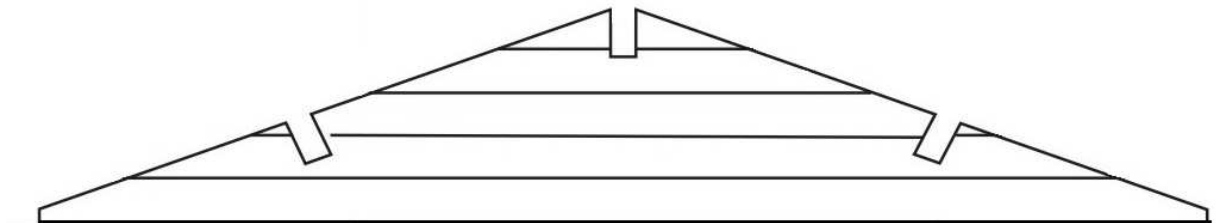


**4.6. Rafters:** The rafters must be mounted horizontally and inserted in the mounting-spaces found on the roof frame triangles. The rafters share a common mounting-space in the middle one of the three triangles. Here are two types of rafter-mounting shown below (picture)

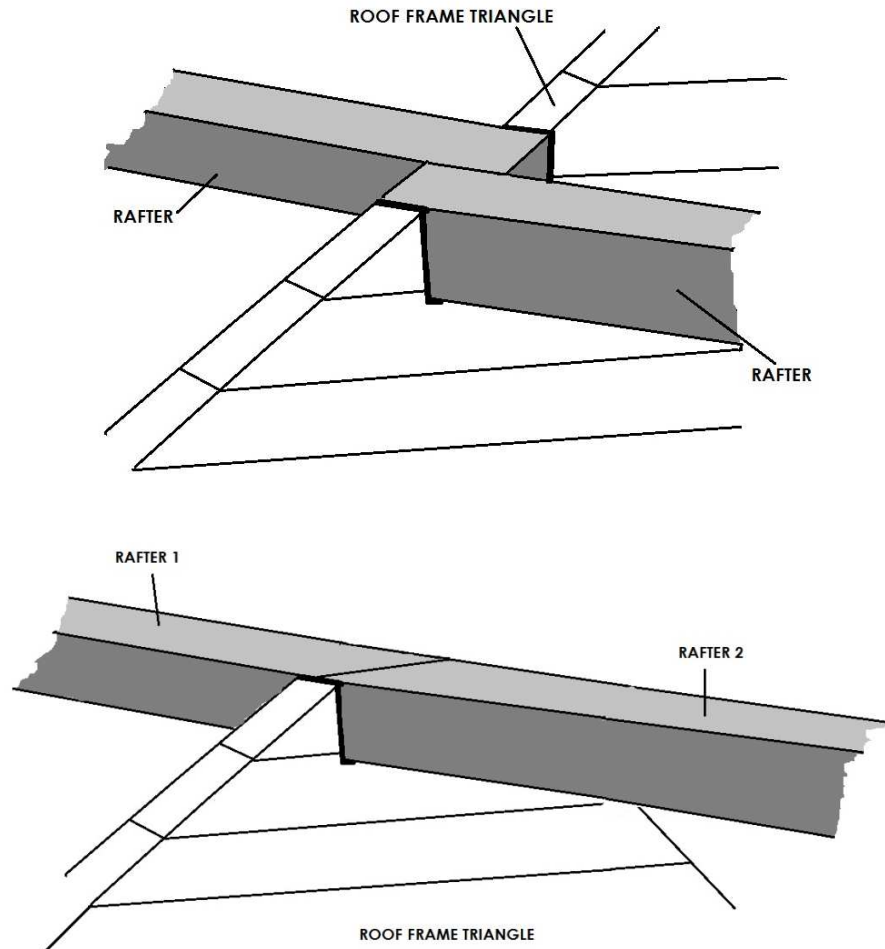

**4.7. Roof-boards:** The next step is to attach the roof-boards vertically and screw them into the rafters. Make sure the ends of the roof-boards are perfectly parallel to each other. Then fix the roof plank boarder under the roof-boards as show below. The roof-plank must be screwed to the roof plank boarder.

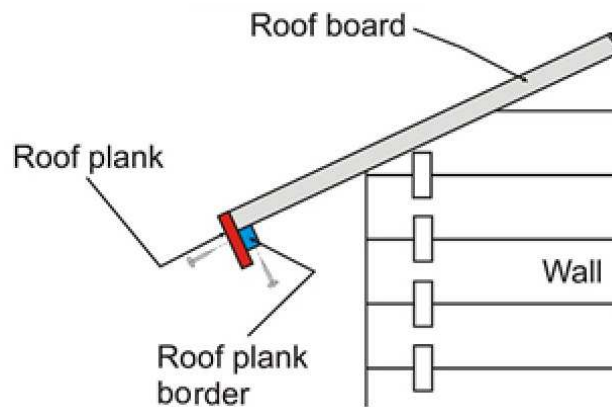


**4.8. Wind-boards:** Place the wind-boards on top of each other to make a 90 degree angle. Now attach these ones on a roof frame triangle and fix by screwing them in.

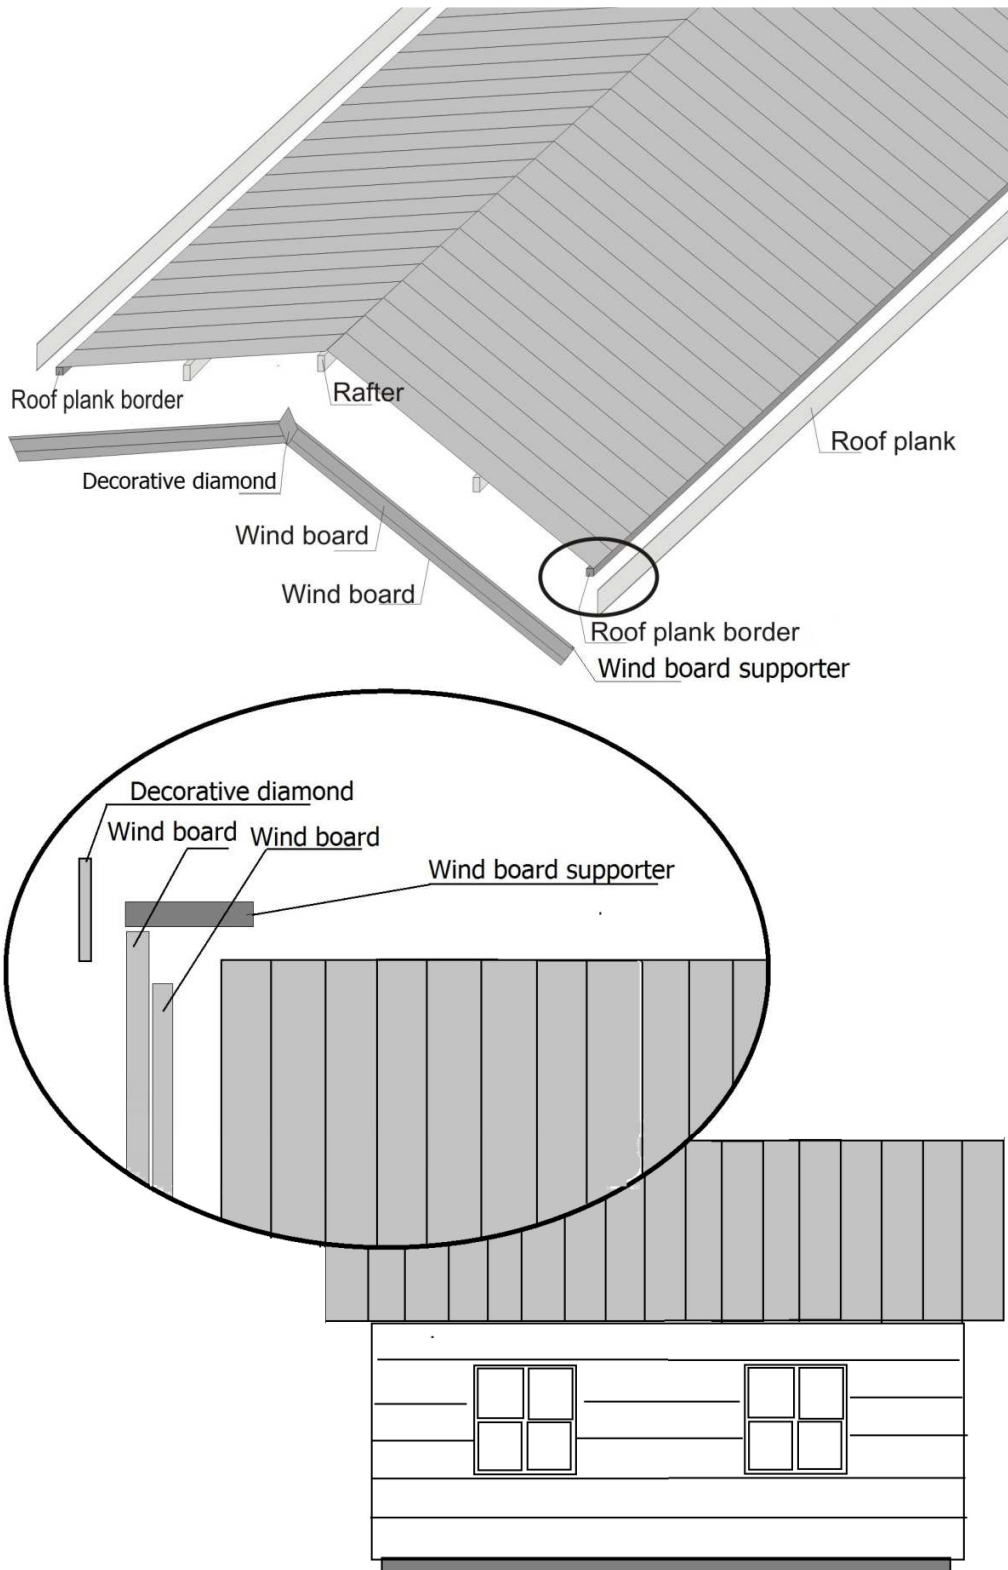





**4.9. Door:** Assemble the door frame fixing it with screws:

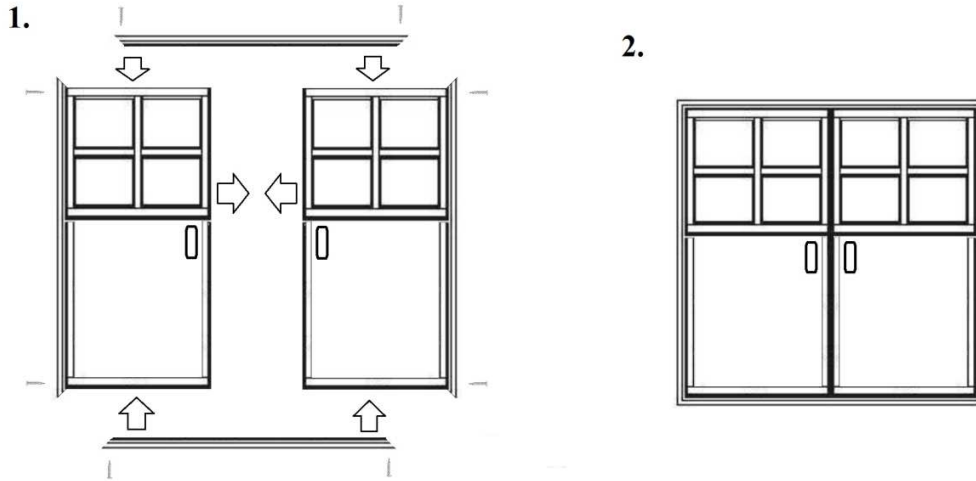

Screw the support trims in to the door frame:

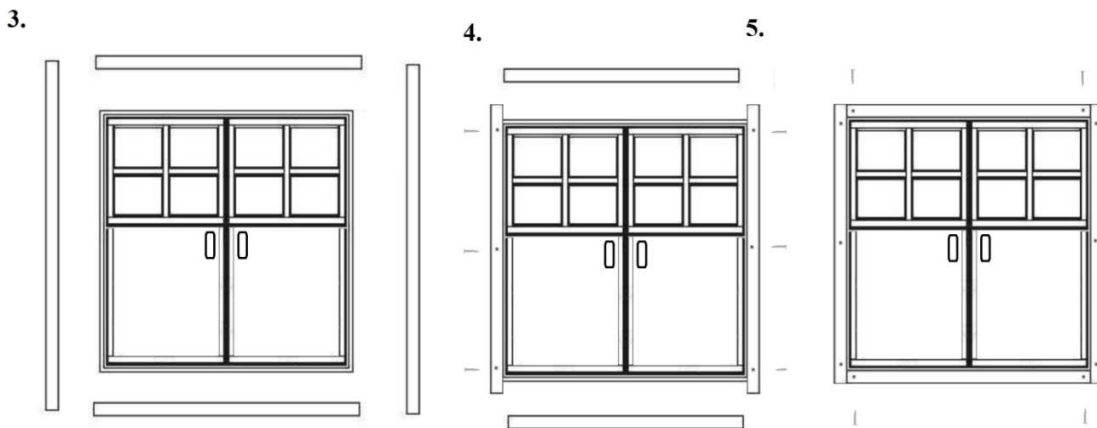


Then insert door frame in to its space from the outside of the structure and attach the rest of the support trims.

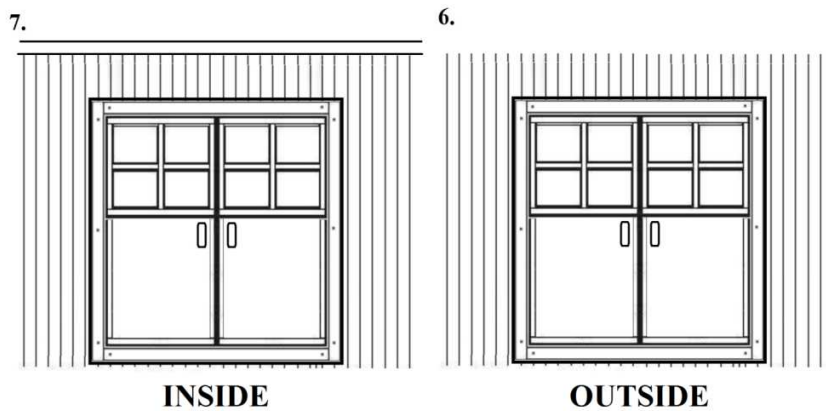


**Notice:**


- Keep in mind that the support trims must be screwed to the door frames, not to the wall-boards!
- Do not worry about the space between the wall and upper window frame. The wood will naturally contract so that the space should disappear within a month or so. Do not try to fill the space in yourself during the assembly process.

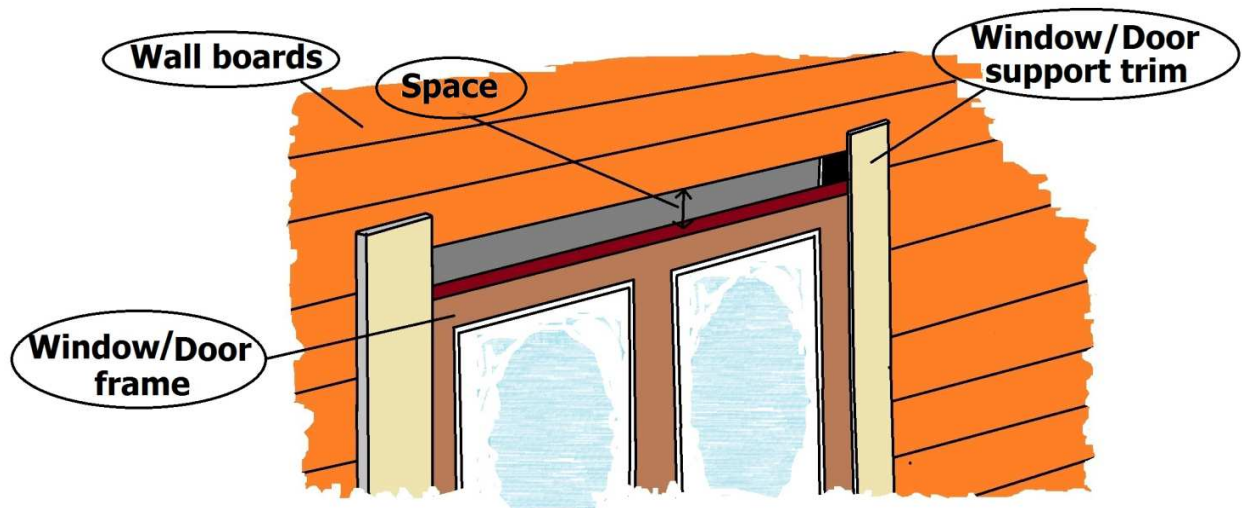


**4.10. Windows:** The windows must be installed in the same way as the door:

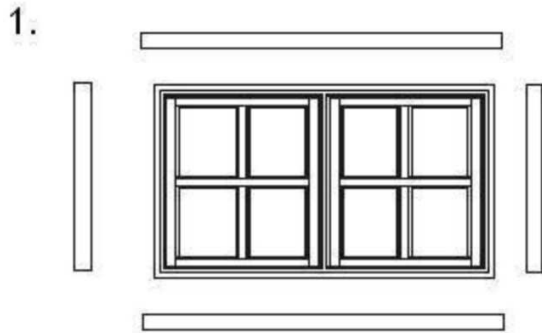


Place the window frame and four support trims on the stable surface.

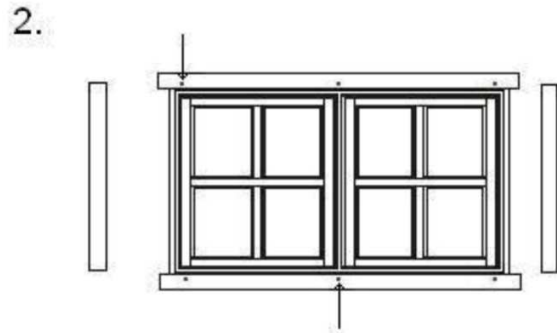


Drill the holes in the support trims and screw them in to the window frame.

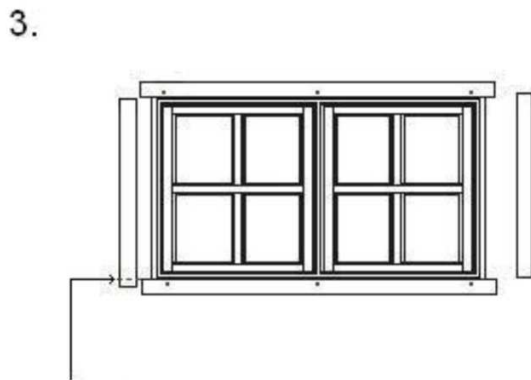


Cut the support trims if necessary

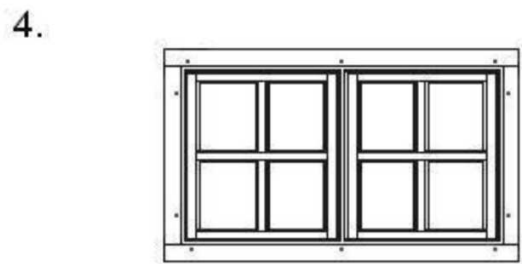

All four support trims are fixed


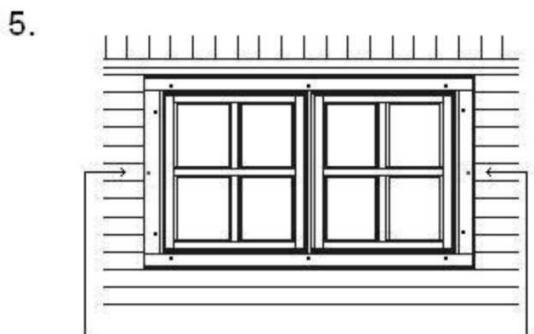


Just insert the window frame in to the space (no screwing)

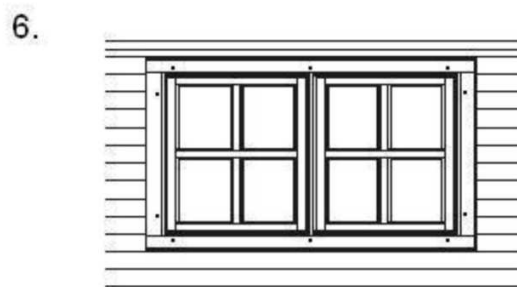


Now screw the rest four support trims in to the window frame from the other side.

**4.11. Floor:** Place the floor-boards across the bearers and screw them in at an angle. In this way you will have a screw-free clear floor. After the floor-boards are mounted, screw the floor-boards decorative trims in to the floor-boards.

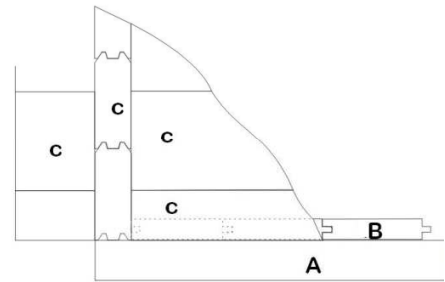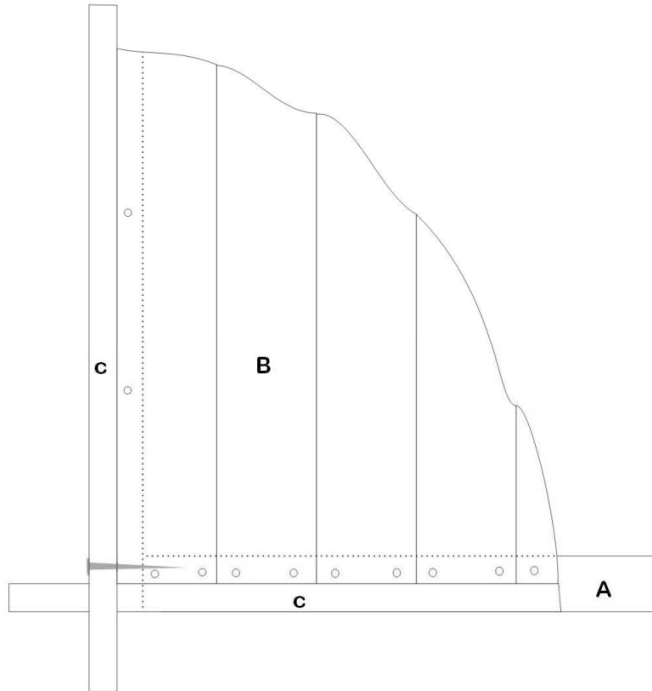

A, - Bearers  
 B, - Floor-boards  
 C, - Wall-boards

**4.12. Felt roof shingles:** When the whole structure is assembled and has been treated, attach the felt roof shingles to the roof-boards as shown in the picture. We recommend that you cover the roof only after the structure has been treated.

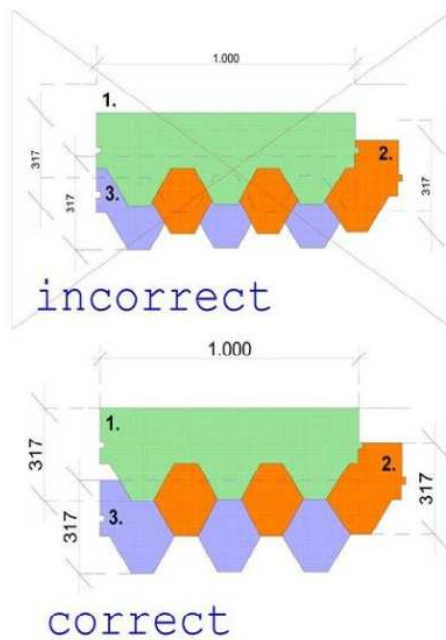

**Treatment.** It is important to treat the product using a quality wood-preservative instantly after the assembly process is finished. Apply at least 2 coats to the outside and 1 to the inside. Repeat annually.

**After-sale service.** Any missing parts or defects must be declared using the After Sales Service form (available in our web site [www.quick-garden.co.uk](http://www.quick-garden.co.uk) or in the last page of this instruction) within 10 days of the product being received. Our After Sales Service will replace defective or missing parts. Make sure you fill in the After-sales service form correctly. After-sale service line + 44 207 097 0013 or [clients@quick-garden.co.uk](mailto:clients@quick-garden.co.uk)

See the terms and conditions of Quick-Garden at [www.quick-garden.co.uk/general-conditions](http://www.quick-garden.co.uk/general-conditions)

Assembly notice – keep for later reference.

We hope you enjoy your purchase.

*Sincerely yours*

*Quick-Garden team*



# Quick-Garden

Customer details: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Product model: \_\_\_\_\_

Please name or describe the missing or damaged parts.

Part number	Dimensions	Quantity	Reason for requesting a replacement part