




OAK CABIN 6m x 3m (20X10)
INSTALLATION PLANS


<i>OAK 6 x 3 (44)</i>						
	Size, mm			Detail stock	Details	Annotation
	Length	Width	Table			
1	3000	130	44	14		Wall C D
2	3000	65	44	2		Wall C D
3	805	130	44	32		Wall C D
4	5950	130	44	15		Wall B
5	2160	130	44	14		Wall B
6	446	130	44	16		Wall B
7	324	130	44	16		Wall B
8	4171	130	44	2		Wall A B
9	2218	130	44	2		Wall A B
10	4171	130	60	1		Rafters
11	2218	130	60	1		Rafters
12	4493	130	60	2		Rafters
13	2540	130	60	2		Rafters
14	1750	115	20	114		Roof boards
15	2745	115	20	50		Floor boards
16	1850	105	22	4		Wind boards
17	1875	105	22	4		Wind boards
18	1875	60	16	4		Wind boards borders
19	3195	105	22	4		Roof plank
20	3195	35	25	4		Roof plank borders
21	5704	35	25	2		Floor borders
22	2754	35	25	2		Floor borders
23	300	140	20	2		Decoration
24	5790	70	50	7		Foundation
25	3000	390	44	3		Vaults
26	1920	1615	44	1		Doors
27	1010	1380	44	4		Windows

1. FLOOR BEARERS:

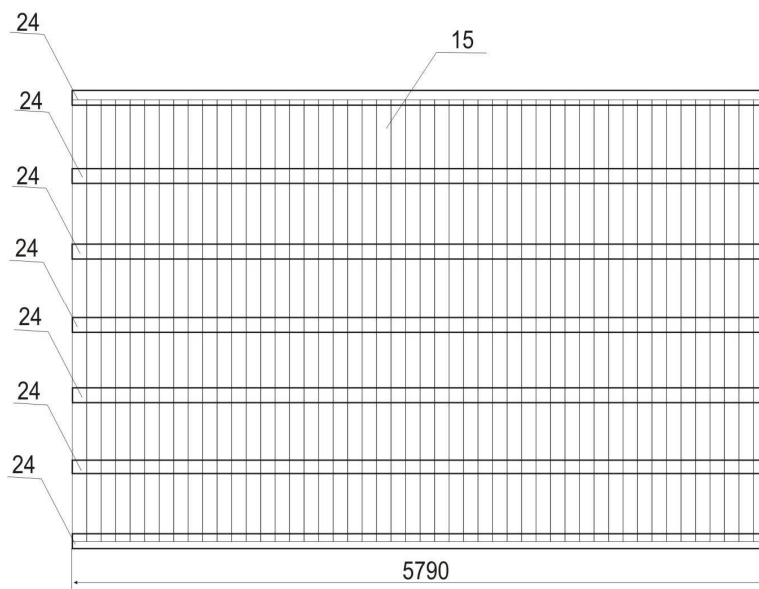


2. THE PLAN:

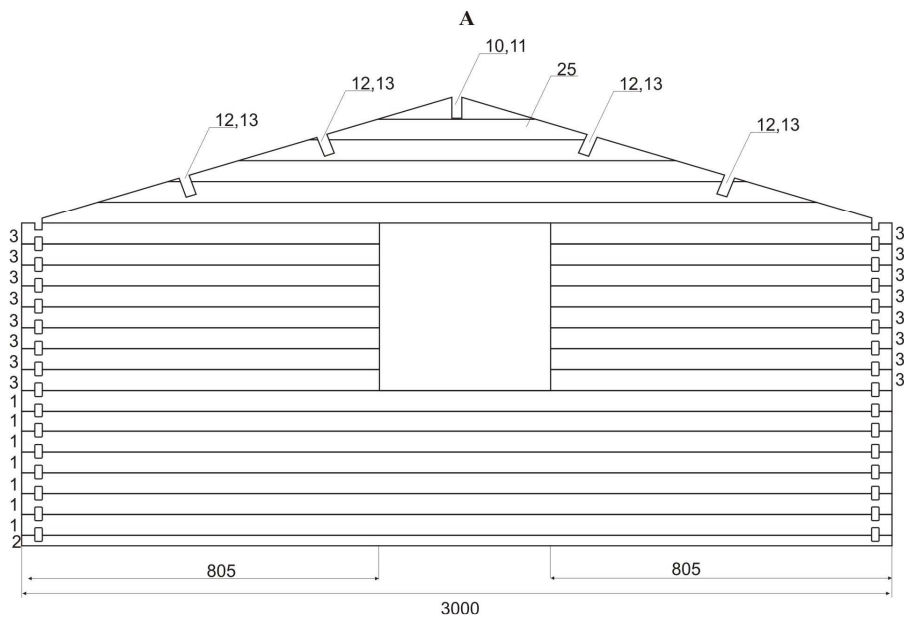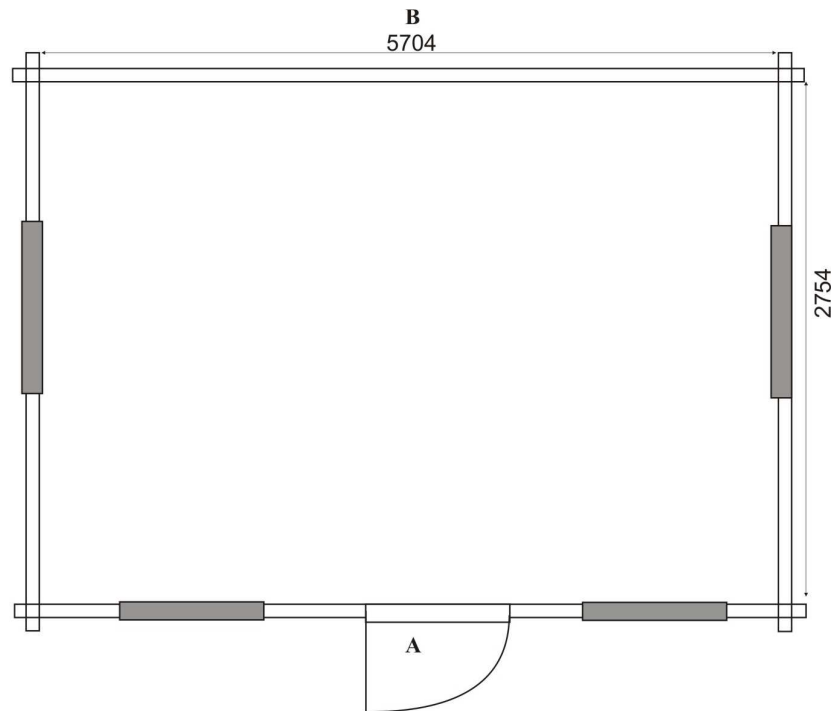


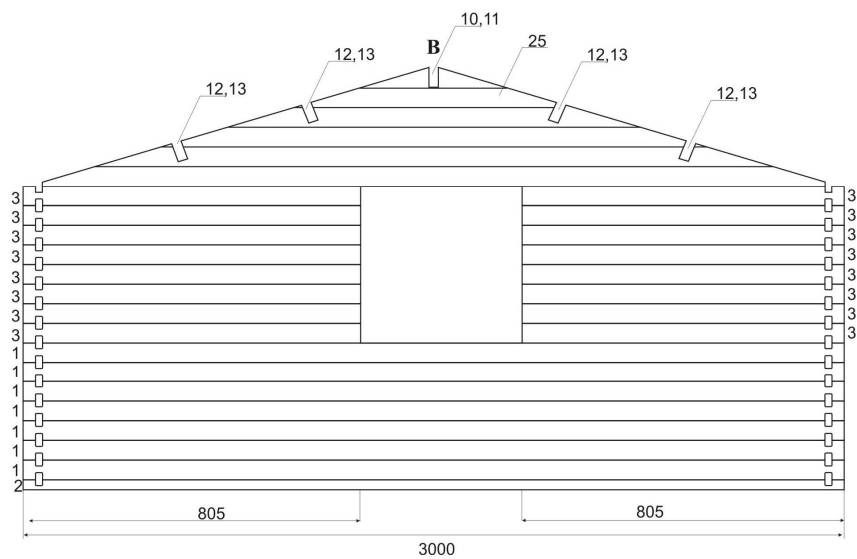


C

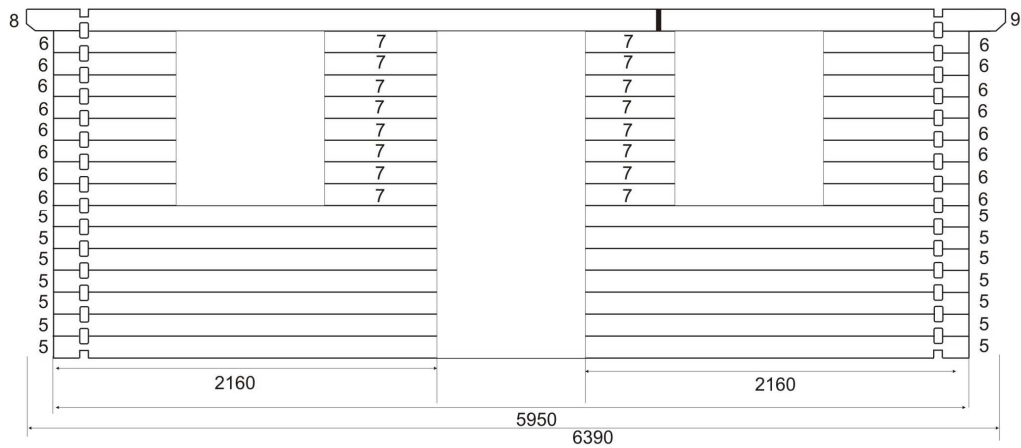

D

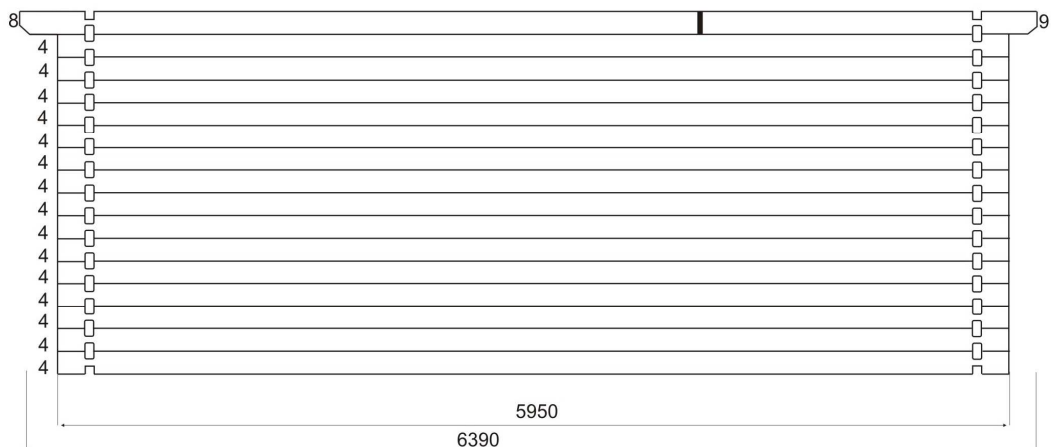


3. THE ROOF:

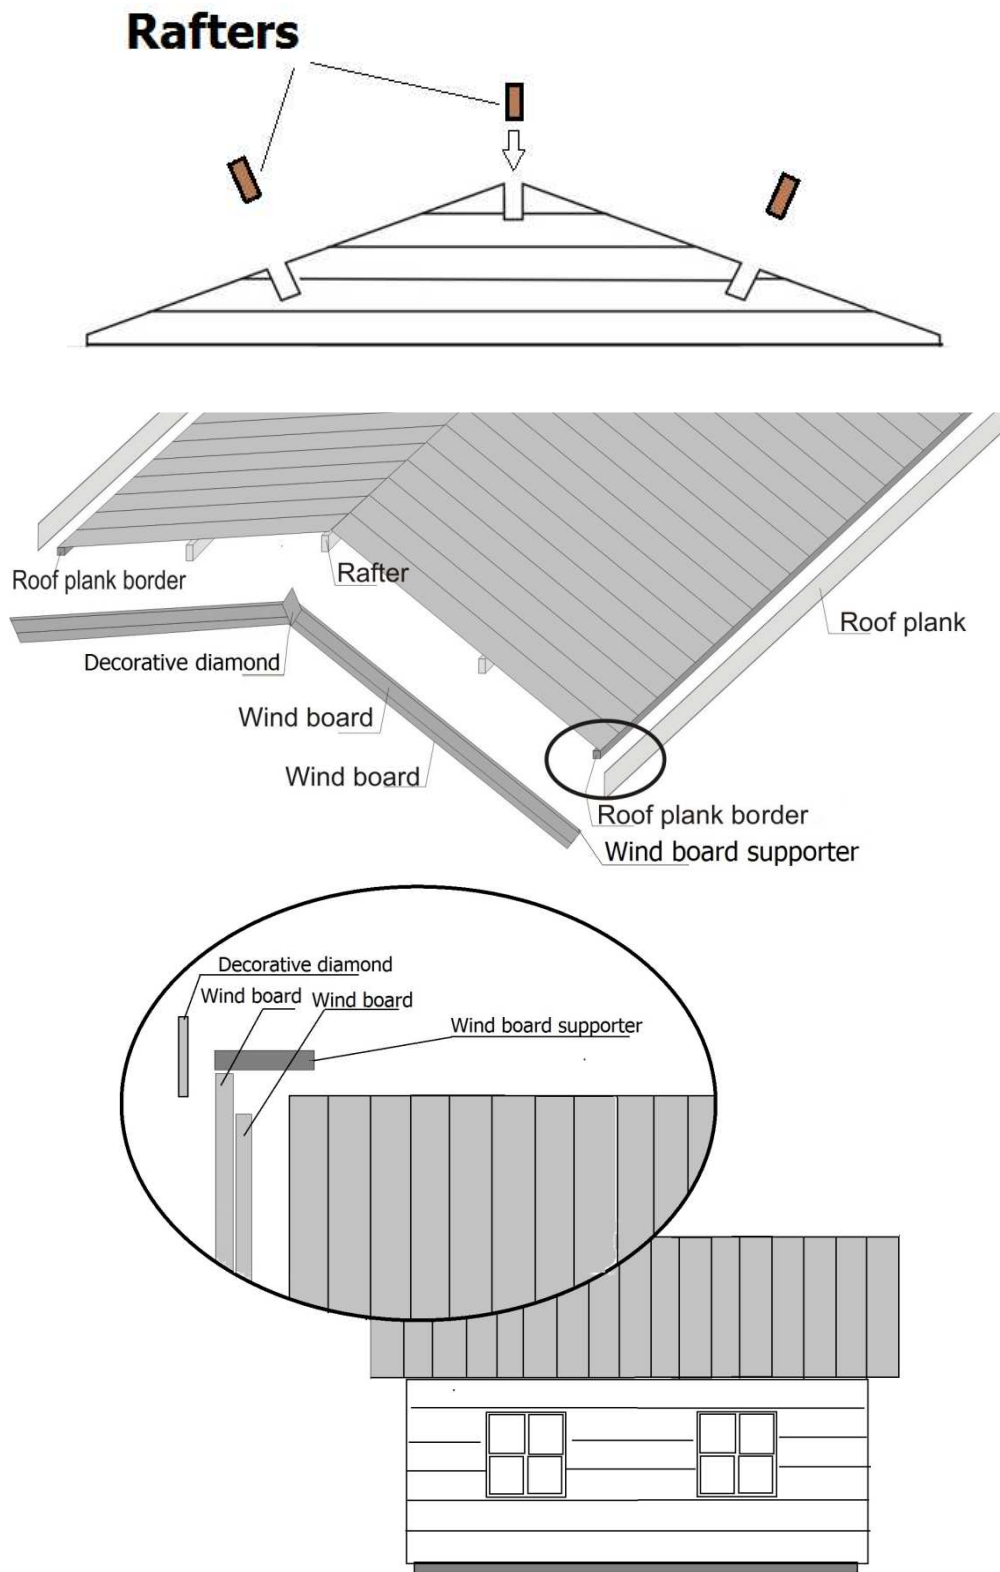


4. DOORS:


1.

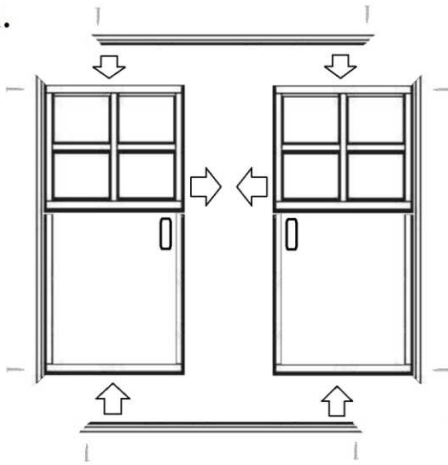


2.

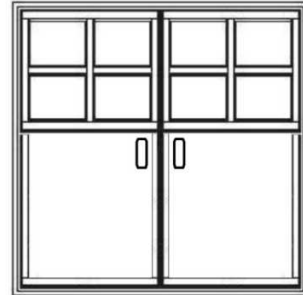


3.

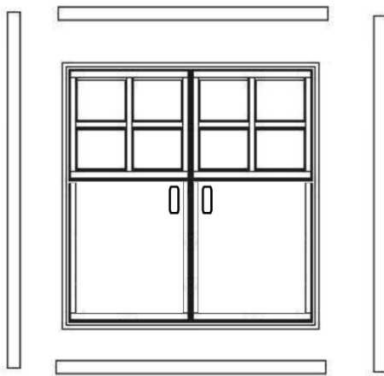


4.

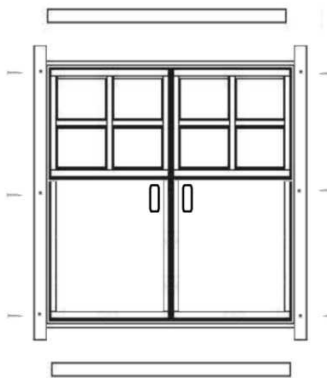

5.

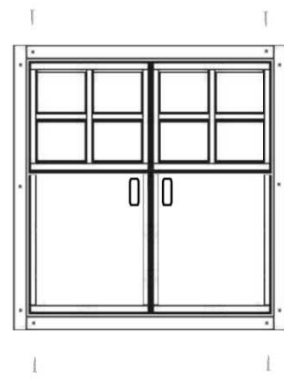


7.

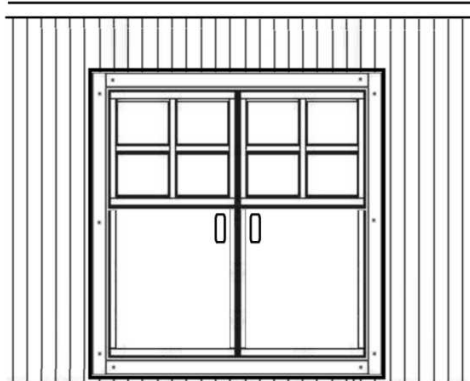

INSIDE


6.

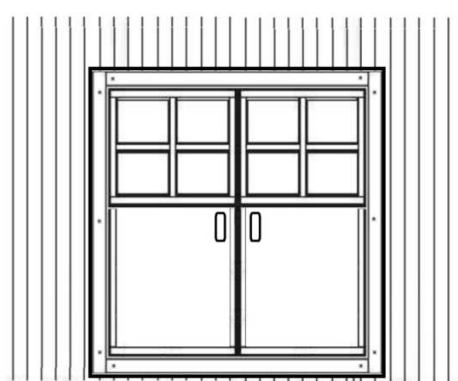

OUTSIDE


5. WINDOWS :

1.

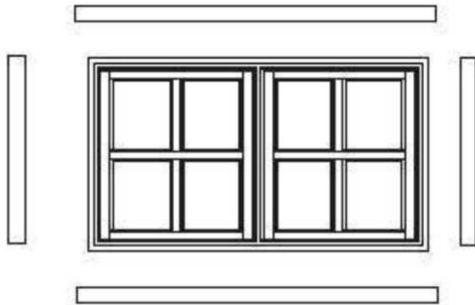


Place the window frame and four support trims on the stable surface.

2.

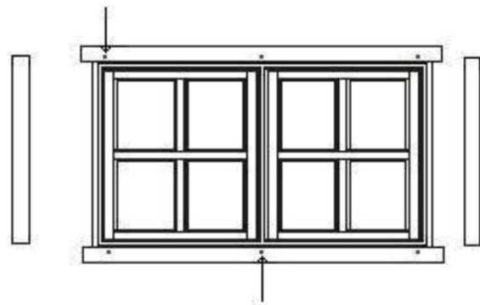


Drill the holes in the support trims and screw them in to the window frame.

3.

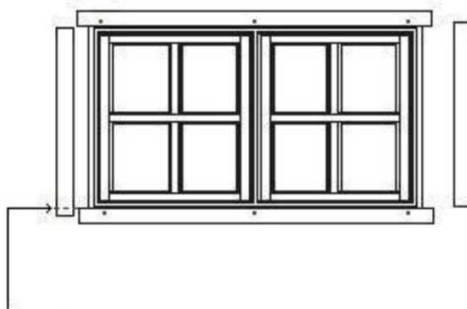


Cut the support trims if necessary

4.

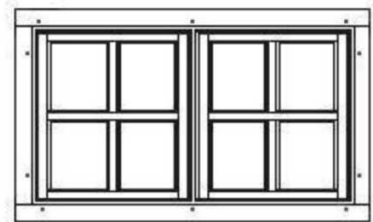


All four support trims are fixed

5.

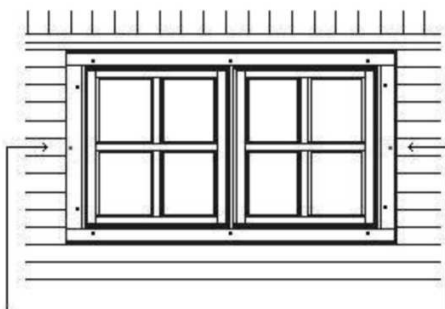



Just insert the window frame in to the space (no screwing)

6.

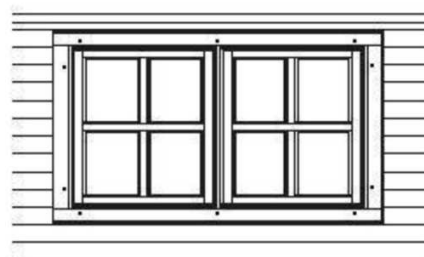

Now screw the rest four support trims in to the window frame from the other side.

6. FLOORBOARDS:

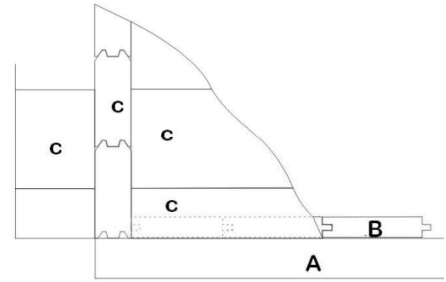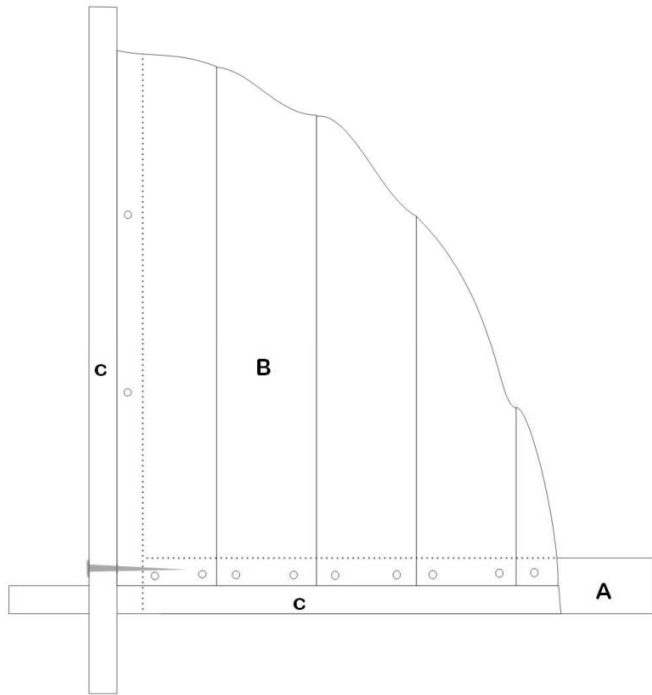

- A, - Bearers
- B, - Floor-boards
- C, - Wall-boards