


WISSOUS 5m X 3m **INSTALLATION PLANS**

<i>Wissous 5 x 3</i>					
1	5000	130	44	15	Wall B
2	5000	65	44	2	Wall A B
3	2882	130	44	7	Wall A
4	812	130	44	23	Wall A
5	680	130	44	8	Wall A
6	805	130	44	13	Wall C
7	3000	130	44	19	Wall C D
8	4470	130	44	2	Wall C D
9	4027	130	44	1	Wall D
10	3684	130	44	1	Wall D
11	3341	130	44	1	Wall D
12	1832	130	44	1	Wall C
13	1489	130	44	1	Wall C
14	1146	130	44	1	Wall C
15	4470	130	60	1	Rafters
16	4470	130	60	4	Rafters
17	2800	115	20	80	Roof boards
18	2745	115	20	42	Floor boards
19	2900	105	20	4	Wind boards
20	2925	105	20	4	Wind boards
21	2925	60	16	4	Wind boards borders
22	4470	105	20	2	Roof plank
23	4470	35	25	2	Roof plank boards
24	4754	35	25	2	Floor boarders
25	2754	35	25	2	Floor boarders
26	300	140	20	2	Decoration
27	4840	55	55	7	Foundation
28	5000	780	44	2	Vaults
29	1920	1295	44	1	Doors
30	1010	1380	44	2	Windows



1. FLOOR BEARERS:





2. THE PLAN:

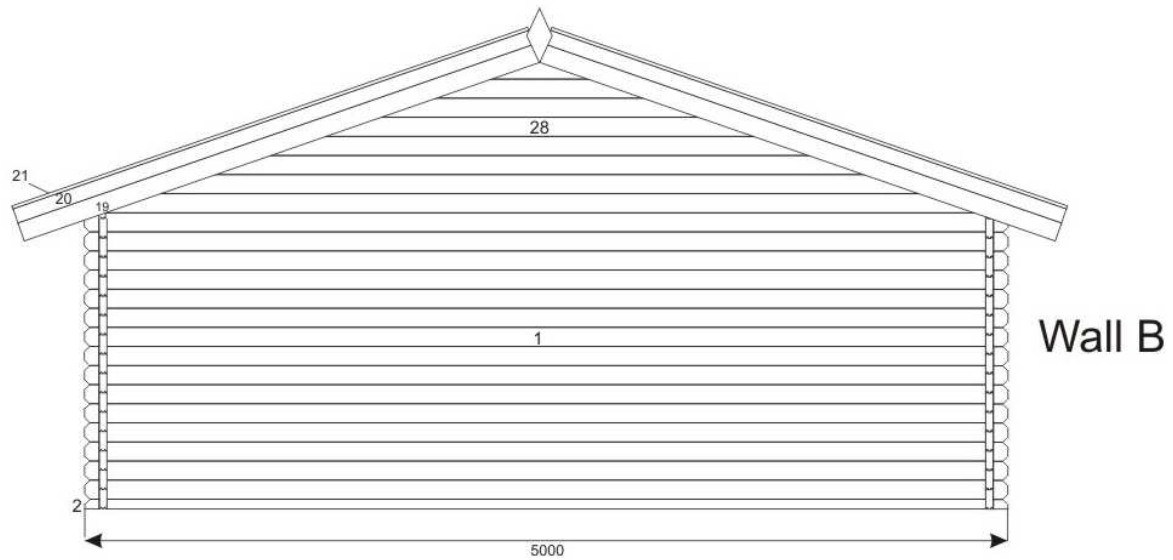

Wall D


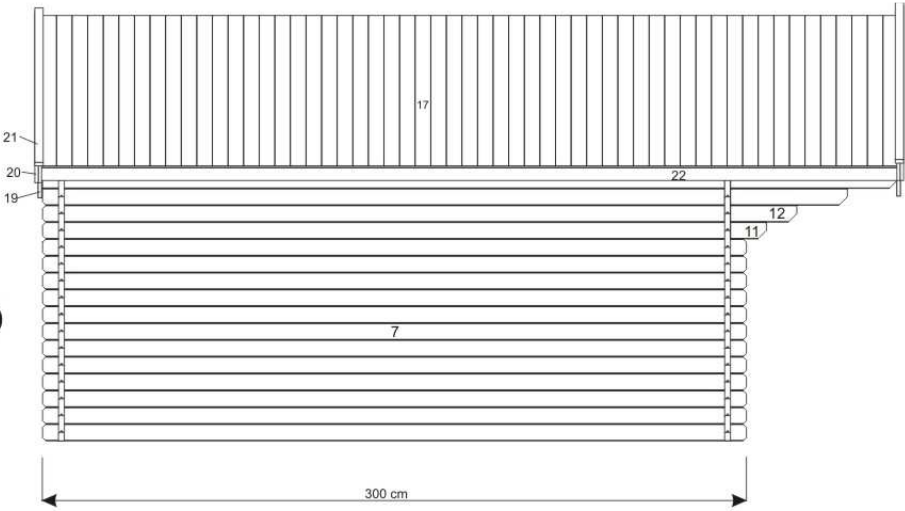



Wall C

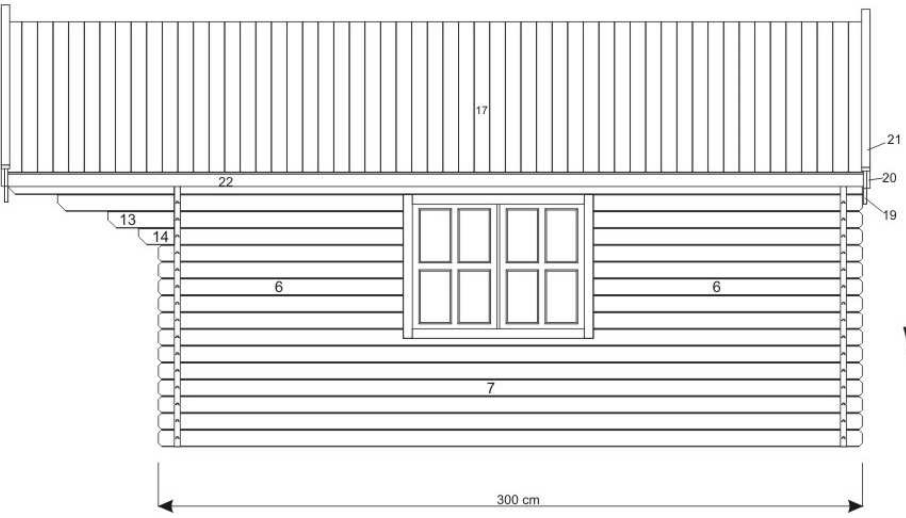


3. THE ROOF:

Rafters

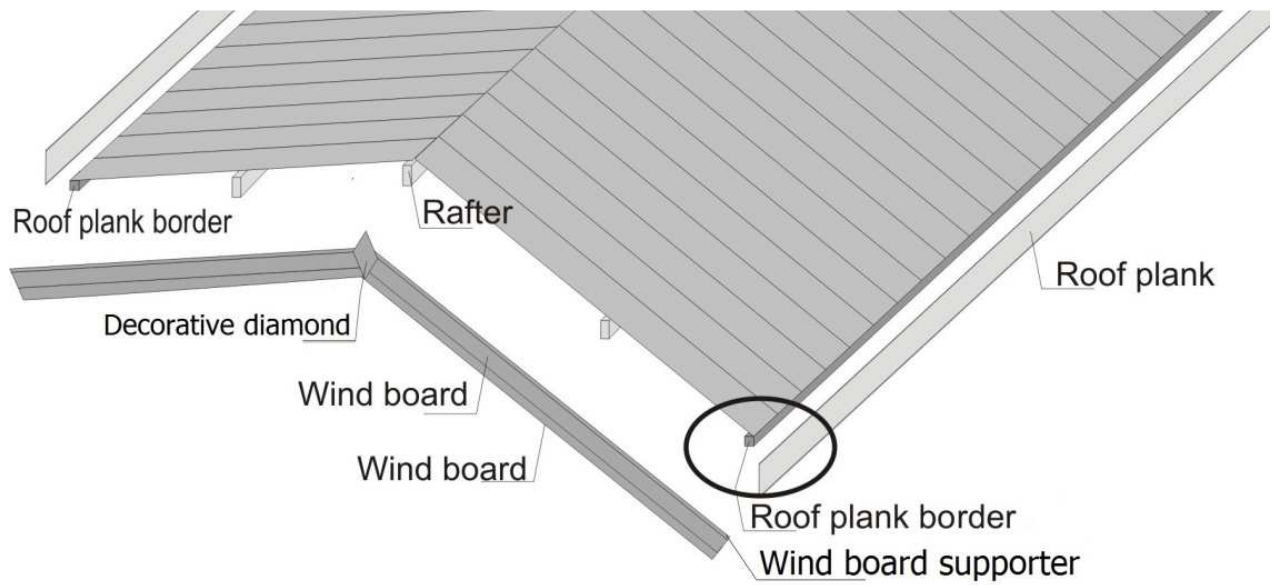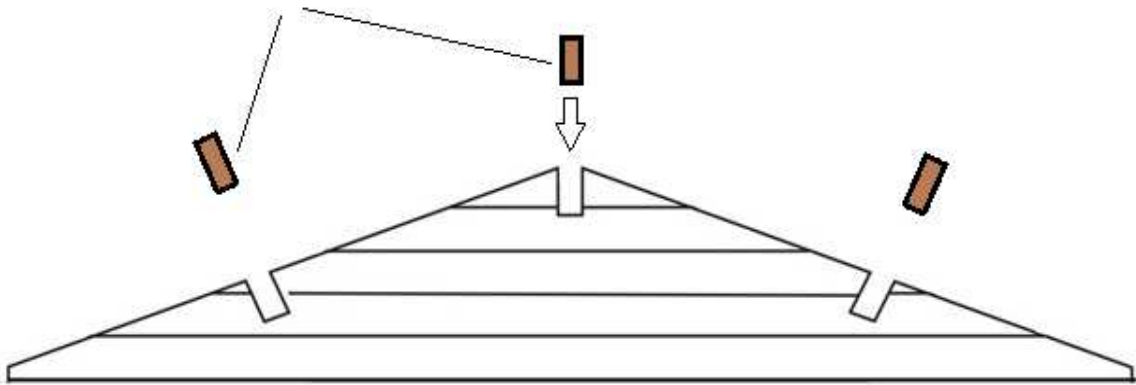


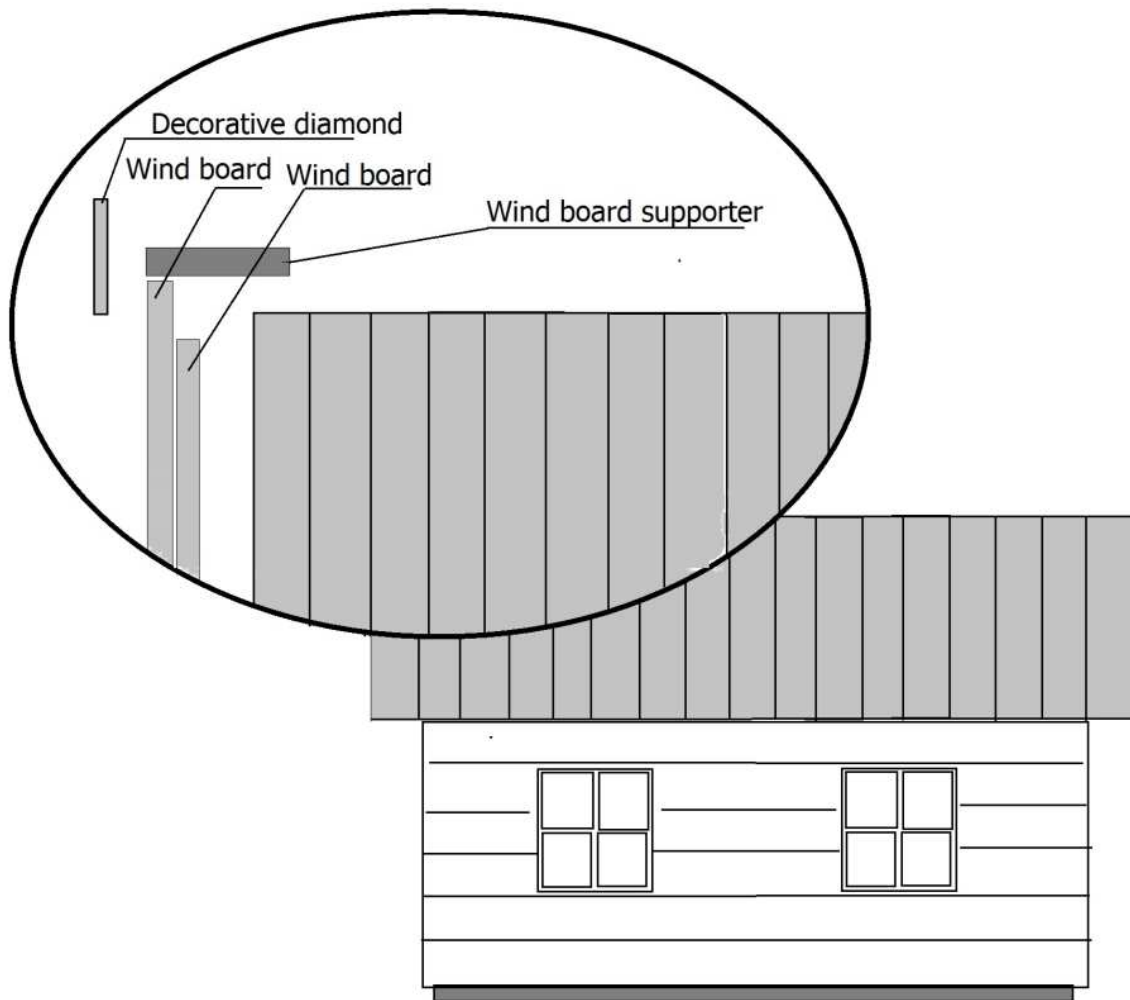


4. DOORS:

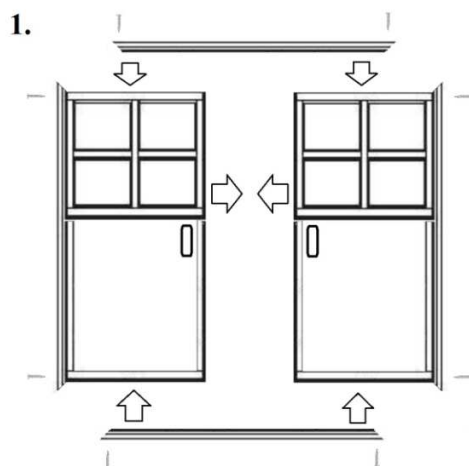


2.

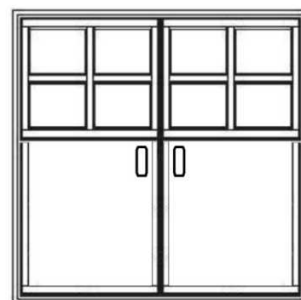


3.

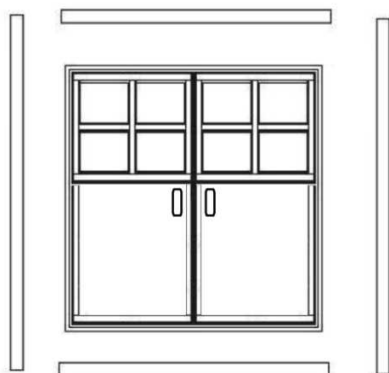


4.

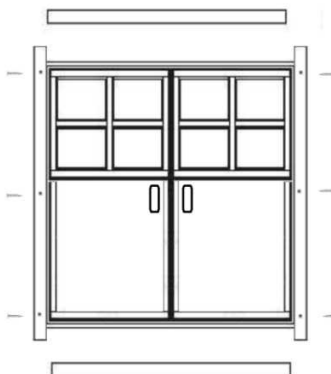

5.

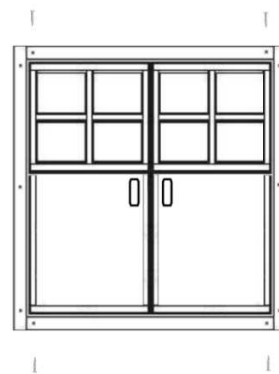


7.

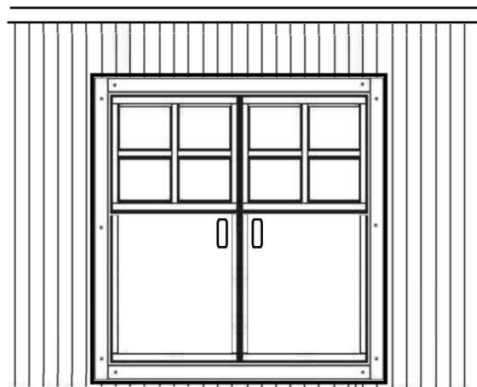

INSIDE


6.

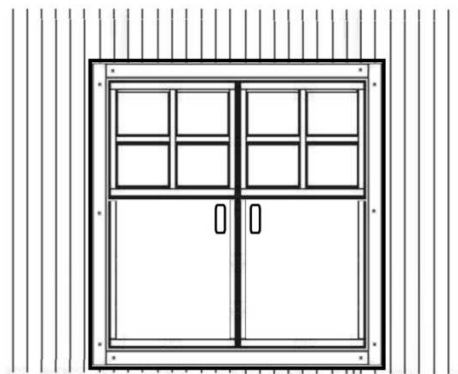

OUTSIDE


5. WINDOWS :

1.

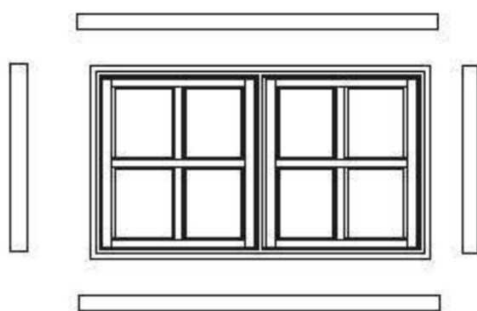


Place the window frame and four support trims on the stable surface.

2.

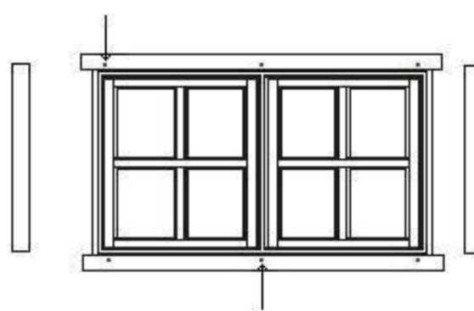


Drill the holes in the support trims and screw them in to the window frame.

3.

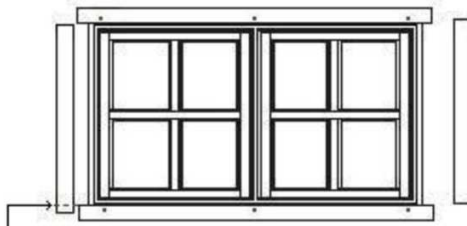


Cut the support trims if necessary

4.

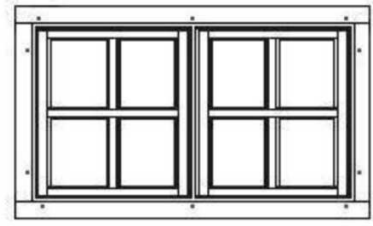


All four support trims are fixed

5.

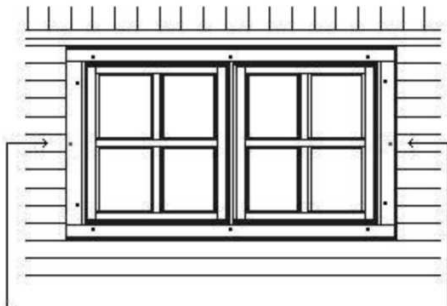



Just insert the window frame in to the space
(no screwing)

6.

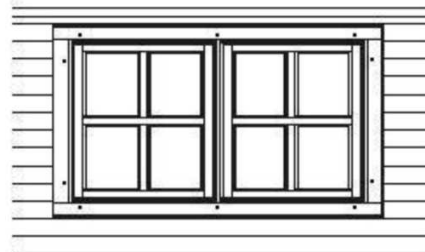

Now screw the rest four support trims in to the
window frame from the other side.

6. FLOORBOARDS:

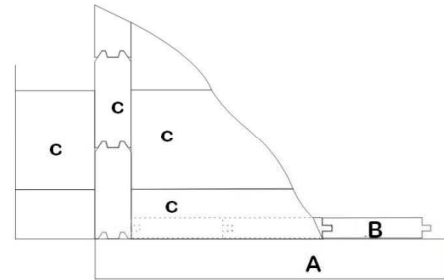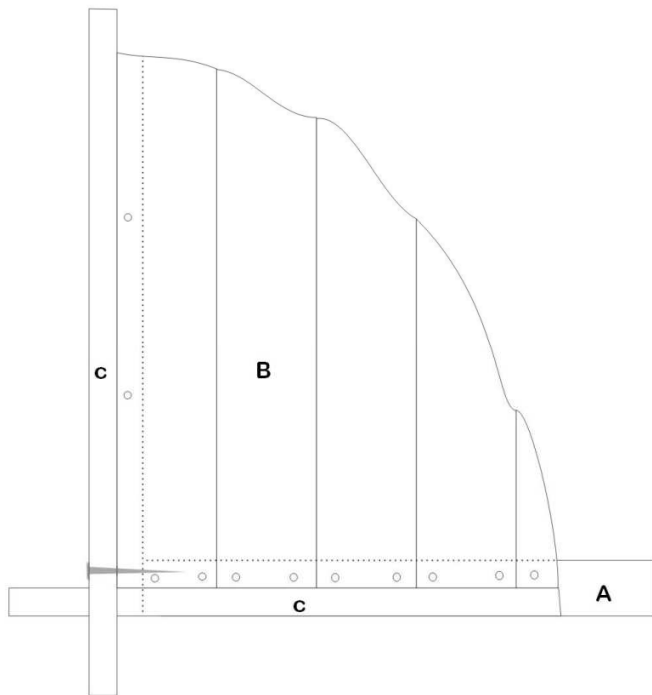

A, - Bearers
B, - Floor-boards
C, - Wall-boards